



Your remote is programmed to channel____.
(A Technician or Representative can tell you which channel)

1. Turn your TV to the channel listed above with your old remote or by changing the channel directly on the TV.
2. Press the MUTE button and hold it down for three seconds until the LED at the top of the remote flashes rapidly.
3. Release the MUTE button and press the POWER button one time. The LED light will light up and remain solidly lit.
4. Press the up arrow button slowly until the TV turns off. This may take many tries.
5. Press SELECT to store the code.

Your remote should now work.

If it turns the TV on and off but doesn't allow you to change channels, you may have to change the channel on your TV (with the old remote) to the stream that it is programmed to channels 5,7 or 12. If your TV works, but the volume does not, repeat steps 2,3 & 4 to try a different code.

Repeat until it works.

If you have problems, please call our help desk at 891-3006 in the Grand Forks/Crookston area, or 1-888-891-3006.

Thank you for choosing Halstad Cable TV!